

## **INTRODUCTION**

Users of the old SMT5 units will know how much of a pain the old library system was; in the SMT6 you have only 1 option, the no-tune option. The no-tune option blanks all settings on the unit, including the global settings, they cannot be changed and they cannot be seen.

## **PROCEDURE**

- 1) To enable the no-tune option the no-tune option is enabled in the configuration file of the tuning software.
- 2) If a unit is in no tune mode it is because the no-tune option was enabled by the tuning software, it is not because of the unit, it is because of the tuning software itself.
- 3) When tuning the unit run the software with the no-tune option enabled.
- 4) Once you have finished tuning save your settings.
- 5) Enable the no-tune option in the configuration file.
- 6) Once a download command is sent to the unit the no-tune is enabled, settings will be hidden when the tuning software is loaded again.
- 7) If you want to correct the settings in a unit, run the tuning software again with the no-tune option disabled. Then load your saved file.

A batch file with two separate cfg files is available, email technical.