




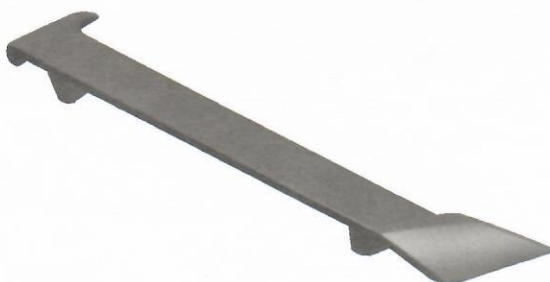

COMPONENTS

(Make sure that all of the following components were included in the kit.)

<p>① Rear spoiler: 1</p> 	<p>② LH & RH Brackets: 1 of each</p> 	<p>③ Nut & Washer Assy (M6): 2</p> 
<p>④ Bolt & Washer Assy (M6x16mm): 2</p> 	<p>⑤ Rivet Stainless Steel (4.8mm): 4</p> 	

PRECAUTIONS

- The rear spoiler is made of plastic and subject to damage if not handled properly. Do not bend it by force.
- Be careful not to damage the vehicle during installation.
- Tighten bolts and nuts securely and to the torques as specified in the instructions.
- Test drive the vehicle after installation and check them for looseness. Retighten them to specified torques if necessary.