

Approx. Wrap vinyl tape here tightly.

25mm or less

- Before drilling holes in the trunk lid panels, wrap the drill bit with vinyl tape as shown so that it's tip does not damage the panel behind.
- Use a hole saw whose bit tip is not any longer than shown at the left.
- Coat the bare edge of hole with touch-up paint to protect against corrosion.
- Be sure to wear goggles when drilling to protect your eyes from drill chips.
- Take care not to scratch or otherwise damage vehicle parts during work.
- Vacuum all drilling remnants to prevent corrosion.

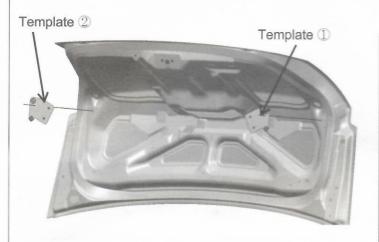


- Open the trunk lid and wipe off dirt, wax, etc. from the working area of the Trunk Lid Inner
- Stuff fresh tack rags inside the trunk and between Inner & Outer panels to prevent drill chips from entering the cargo area and down in between the panels
- Line up templates ① & ② with existing holes in panel and the fillet radii of panel as shown. (Cut-out Templates are on page 12)
- 4) Apply vinyl tape to secure templates in place
- Using a centre punch, mark the centre of all four hole locations, marked on each of the templates.

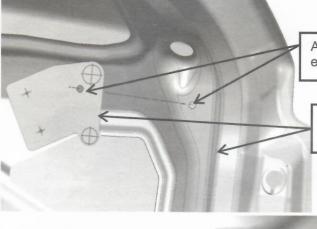

Align hole in Templates with this existing hole in panels

Align this edge of Templates with this fillet radii in panels





Centre

Secure Templates with vinyl tape in at least 4 places as shown